



Parts List for DW300-B3 Type 10

Item Number	Part Number	Description	Qty Required
1	N436863	HOUSING ASSEMBLY	1
2	90542578	FASCIA LOCATION	1
3	90542577	FASCIA COVER	1
4	90542586	GUARD	2
5	330045-05	LOCK SCREW	6
6	330019-13	SCREW,PLASTITE	9
7	330019-16	SCREW	2
8	90542575	ORBITAL CONTROL ASSY	1
9	326467-00	DETENT	1
10	90544008	E-CLIP	1
11	N438164	MOTOR ASSEMBLY	1
12	90517317	BEARING PLATE	1
13	90542634	TIMING FORK	1
14	90516114	COUNTER BALANCE	1
15	90583669	GEAR & BEARING	1
16	823954	WAVY WASHER	1
17	90542604	DRIVE ROLLER	1
18	90544016	RECIP. SHAFT ASSY.	1
19	90532017	SWITCH ASSEMBLY	1
20	90563636	PC BOARD ASSY	1
21	90531500	LENS COVER	1
22	90563700	BRUSH & SPRING	2
23	582696-00	BRUSH BOX	2
24	330005-01	PROTECTOR,CORD	1
25	N454999	CORD SET	1
26	329301-00	CLAMP,CORD	1
27	370748	SCREW	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DW300-B3 Type 10

Item Number	Part Number	Description	Qty Required
28	90578033	BLADE SUPPORT ASSY	1
29	90542862	PIVOT PIN	1
30	90542580	DUST BLOWER	1
31	90544022SV	SHOE ASSEMBLY	1
32	90542573	KNOB	1
33	330019-28	SCREW PLASTITE	2
34	90542992	COVER	1
35	90563633	ID LABEL	1
36	N440831	NAME PLATE	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.